

E1 Camera User Manual



Thank you for purchasing the E1 Camera. Before using this product, please read this manual carefully and then retain it for future reference.
Operate the camera only when you have fully understood the contents of this manual.

Item Check List

Before using the camera, please check that all of the following items have been included. If anything is missing, please contact your dealer.

Camera (with body cap)
Battery Pack
Battery charger
User Manual

Important Operating Information

Camera Care


- This camera is a precision instrument. Treat it as you would any other expensive camera.
- This camera is not water-resistant or waterproof.
- In case of water exposure, switch the camera off immediately, remove the battery and allow to air dry for at least 24 hours.
- Do not leave in places subject to extreme high temperature.
- Do not point the attached lens directly at the sun.
- Avoid touching the image sensor.
- Do not blow on the lens to remove dust.
- Do not use any organic solvents to clean the camera body or lens.
- It is recommended to use a soft lens-cleaning cloth for periodic cleaning of the camera body and lens.
- This camera contains no user serviceable parts. Opening or attempting any type of repair will void your warranty.
- If the camera will not be used for extended periods, remove the battery and store in a dry, cool and well-ventilated place. Press the shutter button regularly to ensure the camera is operating normally.
- Avoid keeping the camera in darkrooms, laboratories or other places where there are corrosive vapours.

Battery Care


- This battery pack is only suitable for use with the E1. Do not attempt to use in any other electrical product.
- Do not expose the battery to heat or water.
- Do not allow the battery to become wet or place it in water.
- Do not allow the battery to come into contact with keys, coins, necklaces or other metallic objects. This may result in a short-circuit.
- Do not subject the battery to force or drop from a height.
- If the camera will not be used for an extended period, remove the battery.

Parts of the Camera


Front

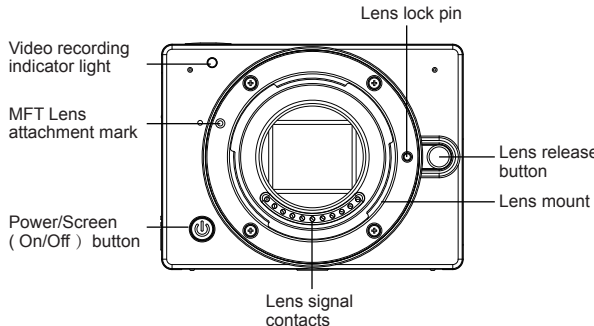


Rear

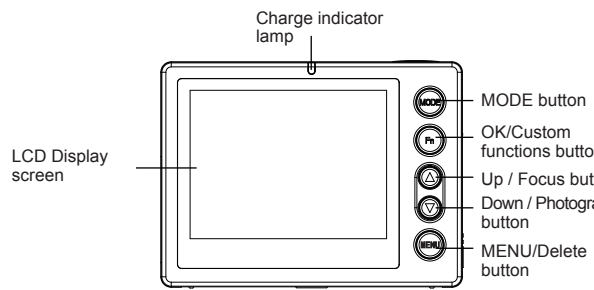


Top

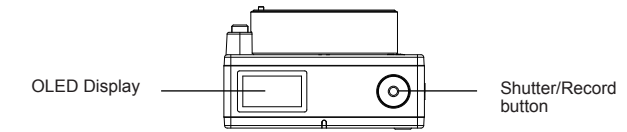


Bottom

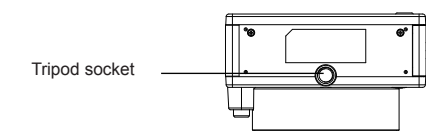

Right

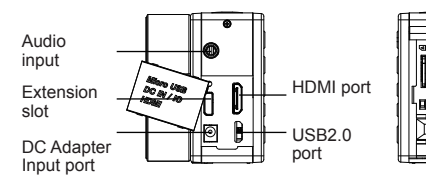

Left

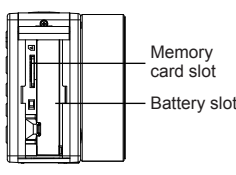


Getting Started


This section describes what steps to take before using the camera

Installing the Battery

1) Open the battery chamber cover

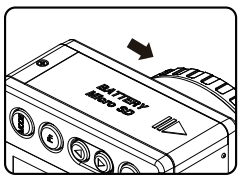


2) Insert the battery and the memory card

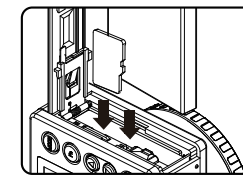

3) Charge the battery


When charging, the charging indicator lamp will glow red. When fully charged, the light will go out.

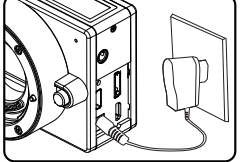

Attaching the Lens


1) Removing the body cap from the camera and the rear cap from the lens

Rotate in the direction of the arrows and remove the body cap from the camera and rear cap from the lens.

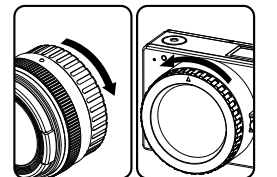


2) Attach the lens

Place the lens on the mount, keeping the marks on the camera and lens aligned and then rotate the lens in the direction of the arrow until it clicks into place.

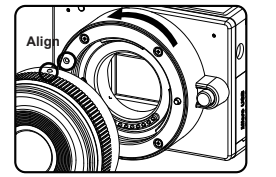


3) Removing the front lens cap

Turn in the direction of the arrow to remove the front lens cap.

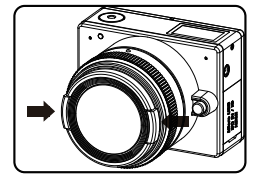

Turning the Camera On

Hold down the power button. When the top of the camera's OLED display boot information, it indicates that the normal boot.

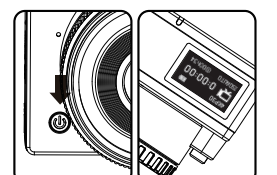


Shooting Videos

This section gives an introduction to shooting videos and parameter set-up procedures.

video Recording

After turn the camera on.


- 1) Frame your subject and then press the shutter button to start recording.
- 2) Press the shutter button again to stop recording.

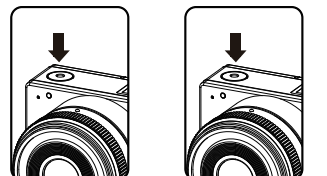

When the camera is recording, the indicator light in the upper left-hand corner of the front of the camera will blink red. The charging indicator light in the middle of the top of the rear of the camera will blink green. The time elapsed will appear in the centre of the OLED Display on the top left-hand side of the camera.


Viewing and Playing Back Videos

Once recording is complete.

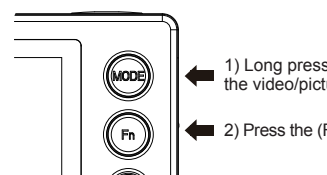


Deleting Videos

1) After viewing a video, press the (MENU) button. Then press the (DOWN) button and select "OK".

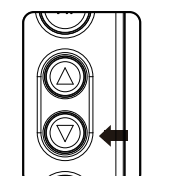

2) Press the (Fn) button to confirm delete.

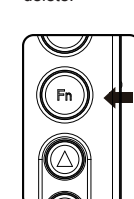


Taking Photographs

This section gives an introduction to take photos and parameter set-up procedures.


Shooting

After turn the camera on and press the (MODE) button to enter the photo mode. Frame your subject and press the shutter button. Once autofocus is complete the camera will automatically take the picture.

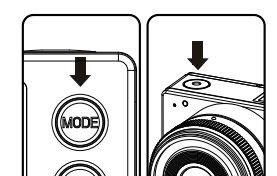


Viewing Pictures

1) After shooting, long press the (MODE) button to view the pictures you have taken. The picture/video interface.

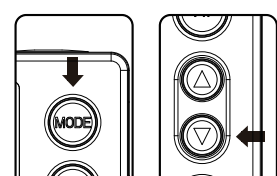


Deleting Pictures


1) When you view the pictures, press the (DOWN) button and select "OK".

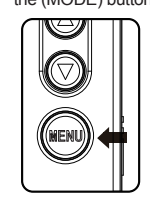

2) Press the (Down) button and select "OK".

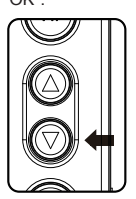

3) Press the (Fn) button to delete the picture.

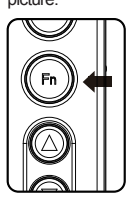

Apps Control

Downloading and Installing the Z Camera App

Android App Barcode



iOS App Barcode




Procedure for mobile phones with iOS operating systems:


Turning on the Camera's Wi-Fi

Turn on the camera


1) Press the (MENU) button to view the menu screen. Press the (Down) button and select the "setting" icon.

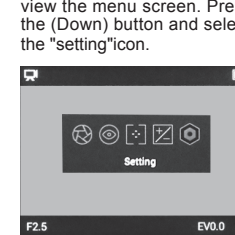

2) Press the (Fn) button to select and access the "setup menu" interface.

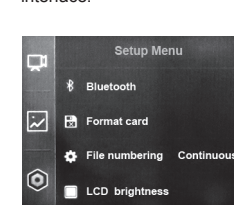

3) Press the (Fn) button once again and access Wi-Fi settings.

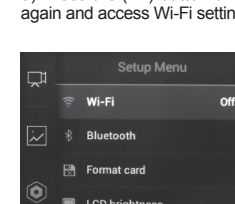

4) Press the (Down) button and select "On", then press the (Fn) button to confirm.




Connecting a Mobile Phone to the Camera's Wi-Fi

1) Tap your mobile phone's "settings" icon and then Wi-Fi. Select the camera's Wi-Fi name.




2) Enter the camera's default Wi-Fi passcode: "12345678". Your mobile phone should be connected to the camera's Wi-Fi now.

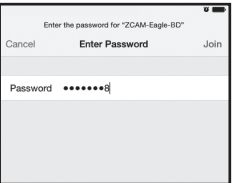


Mobile phone control Shooting

Frame your subject. Once the mobile phone App has been installed and the phone is connected to the camera's Wi-Fi, open the main page of the APP.

1) Tap the "Control" icon to enter shooting interface

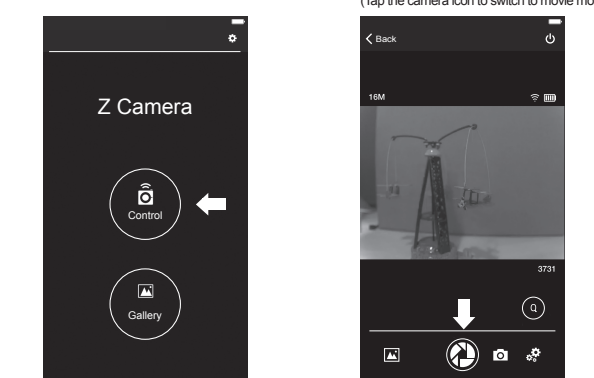


2) Tap on the Shoot icon to start shooting. (Tap the camera icon to switch to movie mode)

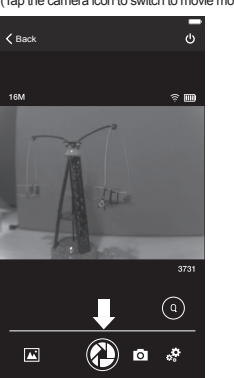

Viewing and Downloading


1) In the App Shoot interface, tap on the photograph icon to access the picture and video browsing interface.

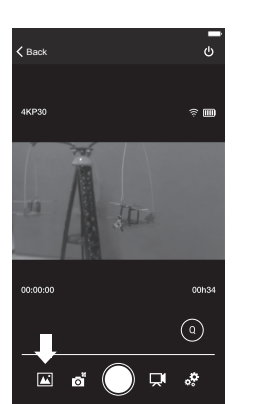

2) Tap on "Video" to access the video browsing interface and tap a video to playback. And then Tap on "Edit" to choose whether to download/delete.



3) Tap on "Photo" to access the picture browsing interface and tap a picture to view.

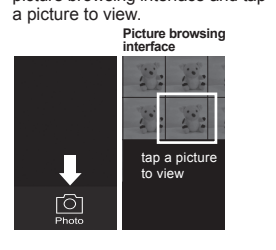


4) Tap on "Edit" to choose whether to download/save/delete.



Parameter Settings

In the App Shoot interface, tapping on the settings icon in the bottom right-hand corner of the screen to access the parameter settings page and make the appropriate parameter adjustments.

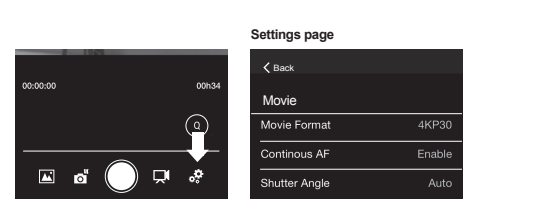

Bluetooth Control


Procedure for mobile phones with iOS operating systems:

Turning on the camera's Bluetooth

1) Turn the camera on, then press the (MENU) button and select "Settings". Then press the (Fn) button to access the "Setup Menu" interface.




2) Press the (Down) button to select the "Setup" icon, then press the (Fn) button to access the "Setup Menu" interface.

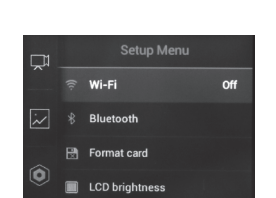

3) Press the (Down) button to select "Bluetooth". Press the (Fn) button to access the "Bluetooth" settings interface.




4) Select "Advertising". Press the (Fn) button, then select "On" turning on the camera's Bluetooth. (The Bluetooth passcode can be changed by selecting "Passcode" in the "Bluetooth" Settings interface.)

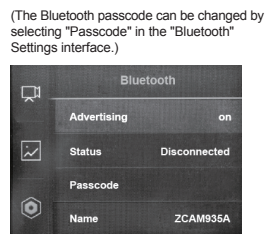


Mobile Phone Bluetooth Connection


1) On the main page of the app, tap the "Settings" icon.

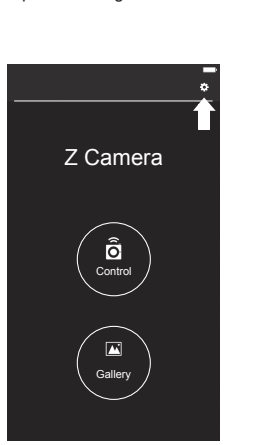


2) Tap the "Camera" (the dialogue box "Turn On Bluetooth to Allow Z Camera to Connect to Accessories") will pop-up. Select "Settings" and turn On Bluetooth.

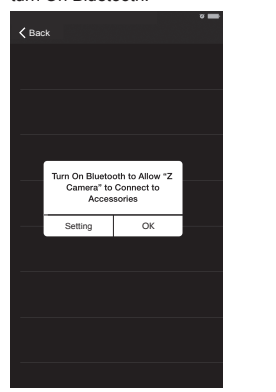

3) Then return to the app's Bluetooth settings interface. Select the camera's Bluetooth name. Enter the camera's default Bluetooth passcode and select "OK".

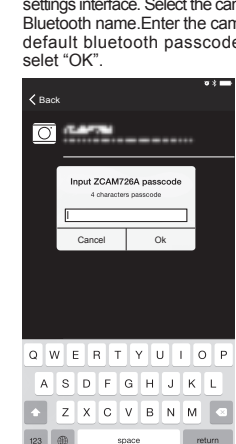

4) Finally, tap "Remote Control" to take pictures, record videos, open/close the camera's Wi-Fi and other functions via Bluetooth.

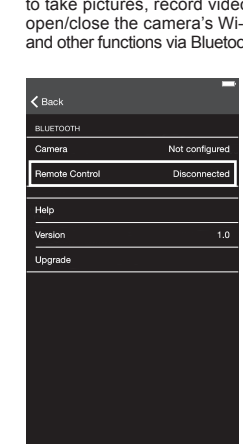

Bluetooth control interface

Via Bluetooth, the phone can directly open / close the camera's Wi-Fi and also control the camera off.



4K Interchangeable Lens Mini Video Camera.

Shenzhen Imaginevision Technology Co., Ltd
Tel: +756 - 86556411
Address: 1205, Block A, Cadre Group Centre, 168 Tongsha Rd, Xili Subdistrict, Nanshan District, Shenzhen